



# FIELDQUIP

family business, Australian owned ...smarter gear ...smarter care



## XGB Series Graderblade



**OWNER/OPERATOR MANUAL**

# Fieldquip XGB Grader Blade

## Operator Instructions and Parts List

Dear Customer,

We take this opportunity of welcoming you as the owner of a Fieldquip Grader Blade. We want your Fieldquip Grader Blade to be the most efficient and productive piece of equipment giving you years of satisfaction. This manual will help you to achieve this objective.

The safe operation and maintenance of your Fieldquip Grader Blade is very important to prevent any personal injury and / or equipment damage. Read and fully understand the following instructions before operating or carrying out maintenance.

This instruction manual must be read in conjunction with the specific Tractor Operation Manual, Hazard Risk and Farm Machinery Safe Work Practices, prior to the equipment being placed in service.

Fieldquip warrants new products sold but it to be free from defects in material and workmanship for a period of twelve months for farmers or lifestyle applications after delivery to the initial user. This warranty is for the replacement or repair of any part found to be defective during the warranty period. This warranty excludes any transport freight costs incurred by Fieldquip in giving effect to the warranty and specifically excludes all normal maintenance costs. This warranty also excludes loss of income incurred by the owner due to down time. Replacement parts provided under the terms of this warranty are covered for the remainder of the warranty period applicable to the product in which they are installed as if such parts were original components of that product.

It is the dealer's responsibility to deliver this unit to you fully assembled and to assist you in the instillation. Before use carefully check the entire machine for transit damage and report any problems immediately.

Fieldquip reserves the right to make changes or improvements in design and construction at any time, without incurring the obligation to make these changes on previously manufactured units.

Many Thanks  
From the Manager

Fieldquip  
199 Bridge Street  
Oakey QLD 4401

Ph: 07) 46911500

## DESCRIPTION

The XGB Series Hydraulic Grader Blade by Fieldquip is a three point linkage tractor mounted implement designed for leveling, and back filling in small areas such as outdoor arenas, small feed lots, drive ways and farm lanes.

Please ensure the unit you have purchased has the horse power rating to match that of your tractor. Due to the very nature of this implement it is extremely important that you read and understand this owner's manual, before commencing operation.

All Grader Blade models are covered in this manual

Record the details of your Grader blade here for future reference.

Serial Number: \_\_\_\_\_

Model: \_\_\_\_\_

Date of Delivery: \_\_\_\_\_

Name of Dealer: \_\_\_\_\_

Dealer Address: \_\_\_\_\_

Dealer Contact No: \_\_\_\_\_

Installed by: \_\_\_\_\_

The information, illustrations and technical data were considered to be correct at the time of preparation.

No Liability can be accepted for any inaccuracies or omissions in this publication, although due care has been taken to make it as complete and accurate as possible.

## THE OWNERS OBLIGATION

Read this manual before operating your Fieldquip implement. The information presented will prepare you to do a much better and safer job. Keep this manual handy as a reference. Ensure all operators read this manual carefully and become acquainted with all the adjustments and operating procedures before attempting to operate. Keep a record that the operator has read and understands the correct operating procedures as outline in this manual.

The implement you have purchased has been carefully engineered and manufactured to provide a robust and dependable implement. Like all mechanical products, it will require routine cleaning, upkeep and maintenance. Lubricate the implement as specified. Observe all safety information in this manual and safety decals on the implement.

## THE DEALERS OBLIGATION

Assembly and proper installation of this product is the responsibility of the Fieldquip dealer. The dealer must complete all items on the Warranty Registration & Installation Form included in this manual before releasing the implement to the new owner.

Both dealer and customer must sign the registration, which certifies that all Dealer Check list items have been completed. The dealer must return a copy of the Warranty Registration & Installation Form to Fieldquip. Reminders about Warranty Registration that have not been returned will be sent out to demonstrate that reasonable attempts have been made to ensure dealers complete risk assessment and pre – delivery obligations.

### **Your Safety is involved be careful**

**Safety is a primary concern in the design and manufacture of Fieldquip products. This implement like all mechanical products can cause serious injury if misused. Please ensure you read, understand and follow this manual for your own safety and that of others.**

## PURPOSE OF THIS MANUAL

The purpose of this manual is to assist you in operating and maintaining your Fieldquip implement. Read it carefully. It provides information and instructions that will help you achieve years of dependable performance. These instructions have been compiled from extensive field experience and engineering data. Some information may be general in nature due to the unknown and varying operation conditions. However, through experience and these instructions, you should be able to develop procedures suitable to your particular situation.

The illustrations and data used in this manual were current at the time of printing, but in an effort to bring you better products we are always implementing continuous improvements that may vary your implement slightly in detail. We reserve the right to redesign and change the machine as may be necessary without notice.

## SPECIFICATIONS

	<b>XGB1800</b>	<b>XGB2100</b>	<b>XGB2400</b>
Width	1.8m (6')	2.1m (7')	2.4m (8')
Suit H.P.	50-90	50-90	50-90
Linkage Cat	2	2	2
Replaceable Cutting Edge	Yes	Yes	Yes

## DECALS



**Your Safety is involved be careful**

**Replace damaged or unreadable decals immediately**

FQS-004



FQS-002

**DANGER! KEEP CLEAR**



FQS-023



FQS-046

FQS-047



Each machine comes with its own serial number plate which will show the model and serial number starting with FQ this number identifies the implement for spare parts enquires and for completion of your warranty form.



IMPORTANT

## SAFETY RULES & ACCIDENT PREVENTION

### Your Safety is involved be careful

In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment. Remember it is the owners responsibility to ensure all operators are fully informed and trained.

It has been said, “*the best safety device is an informed careful operator*” We ask you to be that kind of operator.

- Safety instructions are important! Read all attachments and unit manuals; follow all safety rules and safety decal information. Failure to follow instructions can result in serious injury or death.
- Do not allow anyone under the age of 18 or untrained persons to operate equipment.
- Do not operate the implement or tractor while under the influence of drugs or alcohol.
- Always operate equipment from the seat of the tractor with the seat belt securely fastened. Place transmission in neutral, engage break and ensure all other controls are disengaged before starting tractor engine.
- Know your controls and how to stop quickly in an emergency.
- Make sure the tractor is turned off with key removed hand brake applied and wheel chocked whilst performing any servicing or routine checks.
- Tractors MUST be fitted with Roll Over Protection Structure (ROPS) or (ROPS Cap). It is also advisable that your tractor be fitted with a seatbelt, where fitted it must be worn at all times. Falling from your tractor can result in death from being run over or crushed. If your tractor is fitted with a folding ROPS keep it in the “locked up” position at all times.
- For transportation on public roads the operator must ensure that the tractor and implements complies with current State and Federal laws and must strictly adhere to all road traffic regulations in force in his/her particular state.
- A Minimum 20% of tractor and equipment weight must be on the tractor’s front wheels with implement in the transport position. Without this weight, tractor could tip over causing personal injury or death. The weight maybe attained with a loader, front wheel weights, and ballast in the tyres or front tractor weights. When attaining the minimum 20% weight on the front wheels, you must not exceed the ROPS max ballasted mass certificate. Weight the tractor and implement. Do not estimate.
- If you do not understand any part of this manual and need assistance the Department of Agriculture, Occupational Health & Safety Offices, any Agricultural School or college and your local dealer should be able to direct you on where you can receive appropriate training.
- No operator however experienced in farm machinery operation, should attempt to use any piece of machinery until they have been competently trained in its proper use.
- Operators must be instructed in and be capable of the safe operation of the equipment and all controls. Do not allow anyone to operate this equipment without proper instruction.
- Check that all hardware is tight and properly installed.
- Always wear relatively tight fitted clothing, heavy – duty rough – soled boots and protective equipment for eyes, hair, hands, hearing and head.
- Ensure implement is properly attached, adjusted and in a good condition so that it can be operated safely.
- Inspect chains, shackles, deflectors and any wear parts for damage. Replace if damaged.
- Remove any debris that has accumulated on the implement, tractor or engine to avoid fire hazard. Ensure all safety decals are installed. Replace if damaged.
- Ensure shields and guards are properly installed and in good working condition. Replace if damaged.
- Inspect operating area, remove where possible any stones or foreign objects that may cause injury or damage. It is very important to always watch for foreign objects in the area you are operating and avoid any that could cause injury or damage.
- When working in populated areas always place signs in the area to alert people or vehicles that may pass. Operation must be stopped when anyone cones within 50 meters.
- Keep all people and animals away from the implement during start up, operating and when stopping.
- Use extreme care when working close to fences, ditched, hillsides or other obstacles.
- Do not operate or transport on steep slopes. If in doubt set rear axles wider for moderate slopes.
- Never leave a tractor and implement running unattended.

- Operate only in daylight or good artificial light.
- Keep hands, feet, hair, and clothing away from moving parts while engine is running.
- Look down and to the rear and make sure area is clear and safe before traveling in reverse.
- Do not stop, start or change directions suddenly when traveling on slopes.
- Use extreme care and reduce ground speed when traveling on slopes and rough terrain. Stop implement, then tractor immediately upon striking an obstruction. Turn off engine, remove key, apply hand brake and chock wheels. Inspect and repair any damage before resuming operations. Always block implement when inspecting.
- During routine checks and or repairs ensure that no one can switch on the tractor or Implement accidentally. Keep the key to the tractor in your pocket.
- For your own safety and that of others and to avoid forfeiting your warranty, use only original spare parts.
- Do not modify or permit anyone else to modify/alter the implement or any of its components.
- Frequently check rippers. They should be sharp, free of nicks and cracks and securely fastened.
- Do not handle rippers with bare hands. Careless or improper handling may result in serious injury.
- Your dealer can supply you with genuine replacement parts.
- Firmly tighten all nuts, bolts, screws and rippers before operating. If worn or damaged than replace immediately.
- Block implements securely for storage.
- Keep children and by standers away from storage area.
- Fieldquip Australia accepts no responsibility or liability for any losses, injuries or damage that may result from failing to observe these safety rules and the safety decals on the implement.

## OPERATION

The operator is responsible for the safe operation of this implement. The operator must be properly trained. Operators should be familiar with the implement and tractor and all safety practices before starting operation. Read safety rules and safety decal information before starting operations.

Grader Blades are designed for one man operations. **It is the responsibility of the operator to see that no one comes within 50meters of the grader blade when it is operating.** Accidents have occurred when more than one person is in the immediate area of the operating implement. Be sure no one else is near you when you operate this implement.

- Keep hands, feet, hair and clothing away from equipment while engine is running. Stay clear of all moving parts.
- Do not allow anyone under the age of 18 or untrained persons to operate this implement.
- Keep bystanders at least 50 meters from equipment when operating.
- Keep all people and animals away from the implement during start up, operation and when stopping.
- When working in highly populated areas always place signs in the area to alert people or vehicles that may be passing.
- Always wear relatively tight fitted clothing, heavy – duty rough – soled boots and protective equipment for eyes, hair, hands, hearing and head.
- Check that all hardware is tight and properly installed.
- Stop implement, then tractor immediately upon striking an obstruction. Turn off engine, remove key, apply hand brake and chock wheels. Inspect and repair any damage before resuming operations. Always block implement when inspecting.
- A Minimum 20% of tractor and equipment weight must be on the tractor's front wheels with implement in the transport position. Without this weight, tractor could tip over causing personal injury or death. The weight maybe attained with a loader, front wheel weights, and ballast in the tyres or front tractor weights. When attaining the minimum 20% weight on the front wheels, you must not exceed the ROPS max ballasted mass certificate. Weight the tractor and implement. Do not estimate.



## ATTACHING TO THE GRADER BLADE

- Never stand between the tractor and the implement when attaching the implement.
- Always find somewhere level or flat ground to attach the implement.
- Ensure that implement is not mounted on tractors greater than that specified.
- Always adjust the tractor lower linkage arms anti sway devices to prevent implement from swinging from side to side during transport and operation. Failure to do so may result in serious injury or damage to the implement not covered by warranty.
- Before dismounting from tractor or performing any service or maintenance lower the 3 point linkage to the ground. Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt.
- During routine checks and / or repairs and changing implement settings, ensure that no one can switch on the tractor accidentally. Keep the key to the tractor in your pocket.
- Remove tractor draw bar to eliminate interference with the implement. Attach the implement with the hitch pins supplied to the lower link arms of the tractor and secure with lynch pins. Attach tractor top link to implement top clevis with top hitch pin and secure with lynch pin.



## CHANGING THE ANGLE, TILT AND OFFSET OF THE GRADER BLADE

**When changing any of the angle adjustments of the grader blade; ensure that the tractor is on level ground and the implement is level so that the blade cannot swing around under its own weight.**

**For hydraulically adjustable blades ensure all personnel are clear of the grader blade minimum distance of 20m, also ensure there are no obstacles that could be struck whilst adjusting the blade.**

## OPERATING TECHNIQUE

- When operating the Grader Blade, be careful to avoid large obstacles that would create undue loads on both the blades and linkage which could result in damage to your grader blade.
- Taking to large quantities when back filling will cause the tractor to stall.
- Vibration tends to loosen bolts during operation. All hardware should be checked regularly. It is good practice to check implement before each operation to ensure all hardware is secure.
- Pass diagonally through sharp dips and avoid sharp drops.
- Best performance can be achieved at an approximate speed of 3-6km/hr.

- With the rippers tynes raised all the way up, simply lower the Grader Blade to the ground and proceed forward. The cutting edge should begin to have the soil surface and dirt should begin to accumulate in the blade.
- You can transfer this material by dragging it to a nearby location and then slowly raise the scraper with the 3 point linkage to deposit the accumulated load.
- To achieve a more uniform distribution or to level off high spots set the grader blade at a slightly higher setting allowing the box blade to shave off the high spots and allow accumulated material to flow into low spots.
- Occasionally the ground surface will be very hard and will require ripping to loosen the soil in order for the grader blade to be effective.
- The deeper you rip in hard soil the more likely you are to stop the tractor. It is better to make multiple shallow rips than to stop the tractor by being too aggressive. Achieving the desired effect will require a little experimentation in your given conditions.
- Grader Blades generally perform better in dry to slightly damp soil conditions.
- When back filling lower the box blade and gently back the rear facing cutting edge into the pile of dirt you are using for back fill, pushing it to into the desired location.
- Back filling operations should be performed with the load in the center of the blade.
- **DO NOT** ram into the load as this multiplies the force several times above normal and could result in damage to the implement.
- All back filling work should be performed at slow speeds to prevent damage if the blade hits an object.
- With back filling operations, the top link setting is very critical. Lengthen the top link so the blade is tilted down at the rear in order that the blade moves across the ground, not digging into it.
- **When using the optional depth wheel, you must raise the implement and the wheel off the ground before operating in reverse.**
- The optional depth wheel should only be used for the final grade. Set blade edge about 10mm above the ground with the tractor three point linkage. Adjust the depth wheel to take some of the weight then adjust tractor top hitch. Fine tune grading height by raising or lowering the tractor three point linkage.

## DISCONNECTING THE GRADER BLADE

- Lower the grader blade all the way to the ground. Turn off the tractor ignition and remove the key.
- Apply park brake, remove seat belt, and dismount the tractor.
- Block implement securely for storage with secure support, remove lower linkage pins.
- Slowly move tractor away from implement checking that implement will not fall from blocking.

## TRANSPORT

- **Do not operate on steep slopes, if in doubt set rear axles wider or only operate on moderate slopes**
- **Do not stop, start or change directions suddenly on slopes and traveling straight up and down is recommended.**
- **Use extreme care and reduce ground speed on slopes and rough terrain.**
- **Watch for hidden hazards on the terrain when traveling to where you will be operating.**
- Pay close attention to the Safety Messages regarding transportation of this implement. Avoid unnecessary injuries and equipment damage by exercising cautious, conscientious travel procedures.
- Attaching the implement to the tractor increase the overall length of the working unit. Allow additional clearance for the implement to swing when turning.
- Raise the implement as high as possible for transporting.

## BLOCKING

**To minimize the potential hazards of working underneath the implement, these procedures must be followed.**

- Jack stands with a load rating of 1000lbs or more are the only approved blocking devices for this implement. Do not position jack stands under wheels, axles or wheel supports as components can rotate and cause implement to fall.
- When blocking, you must consider the overall stability of the implement. Just placing jack stands under the unit will not ensure your safety. The working surface must be level and solid to support the weight

of the jack stands. Ensure jack stands are stable both top and bottom, and implement is approximately level.

- Implement should be properly and securely attached to the tractor (see operating section), the brake firmly set, key removed and both front and rear tractor wheels securely blocked.

## MAINTENANCE

- **Follow operators manual instructions for working on your implement or have servicing carried out by a qualified dealer.**
- Before dismounting tractor or performing any service or maintenance lower the 3 point linkage and any other raised components to the ground.
- Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt.
- Ensure that no one can switch on the tractor accidentally by keeping the key in your pocket.
- Never place any part of the body underneath the implement or between moveable parts even when engine has been turned off. Hydraulic systems can slowly lower. They can fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death.
- **Never perform maintenance from underneath the implement.**
- **Always wear relatively tight fitted clothing to avoid entanglement in moving parts. Wear Heavy-duty boots and protective equipment for eyes, hair, hands, hearing and head.**
- Cutting Edge: Replace when worn. Always check nuts and bolts are tight.
- Check implement for loose or missing bolts, broken structure, replace any missing bolts and have repairs carried out by qualified dealer as necessary.

## SCARIFIER POINT REPLACEMENT

- Make certain that you wear gloves and safety glasses. Chips can fly off hammer or punch and cause eye damage, loss of eyesight, or other injury.
- Place scarifier assembly in vise securely. Using a hammer and punch, drive the worn point off.
- Hammer the new point on securely.
- Using a hammer and punch, indent the point edge into the recess in side of scarifier.

## DAILY PRE-OPERATION CHECKLIST

### (Operators Responsibility)

- Review and follow safety rules as outlined in this manual.
- Check that implement is properly and securely attached to the tractor.
- Check that all bolts, nuts, shackles, chains, etc are properly installed, secured and in good condition.
- Check that cutting edge is not damaged and if damage has occurred replace prior to usage.
- Ensure tractor transmission is in neutral before starting the engine.
- Inspect area that you will be operating in and move any object that may cause injury or damage.

## OWNER SERVICE

The information in this section is written for operators who possess basic mechanical skills. Should you need help, your dealer has trained service technicians available. For your protection, read and follow safety information in this manual.

- **Disengage tractor PTO and wait for all moving parts to come to a complete stop. Lower implement to the ground or block with secure robust support. Turn tractor engine off, remove key, apply hand brake, chock wheels and disconnect PTO Shaft from the tractor before performing any service or maintenance.**

- Keep all persons away from operator control area while performing adjustments, service or maintenance.
- Never go underneath implements that are lowered to the ground or raised, unless it is properly blocked and secure. Never place any part of the body underneath the implement or between moveable parts even when engine has been turned off. Hydraulic systems can “creep” slowly lower. They can fail or accidental movement the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operators Manual instructions for working on your implement, or have work carried out by a qualified Fieldquip dealer.
- Keep hands, feet, hair and clothing away from equipment. Stay clear of all moving parts.
- Always wear relatively tight fitted clothing, heavy – duty rough – soled boots and protective equipment for eyes, hair, hands, hearing and head.

## TROUBLE SHOOTING

Follow all safety procedures while trouble shooting.

Problem	Possible Causes	Possible Solutions
Shearing Carrier (M/B)	Lack of lubrication.	Lubricate pivot pin.
Pivot Pin Bolt.	Bolt not tightened properly.	Tighten bolt to proper torque.
Bent (Moldboard)	Small curve is normal from weld pull. Hitting hidden objects.	Can be removed but will not affect operation. Know soil conditions, keep speed to minimum.
Blade will not penetrate soil.	Cutting edge dull. Blade set to straight. Soil too hard.	Replace cutting edge. Increase top link length. Use scarifiers to loosen soil.
A Frame bent.	Hitting hidden objects in the back fill position.	Use slow speed when in unknown soil conditions.
Moldboard digging in too much.	Blade pitch excessive. Soft ground.	Adjust top link. Install leveling wheel.
Unable to hold level ground.	Tractor and blade follow contour. Tractor draft control lifting blade.	Install leveling wheel. Set tractor draft control.

## SPARE PART LIST

**Diagram needed here**

<b>Code</b>	<b>Part No.</b>	<b>Description</b>

## PRE DELIVERY CHECKLIST

### Dealers Responsibility

Inspect implement thoroughly after assembly to be certain it is set up properly before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory either before or after corrections or services performed.

- The product is complete and correctly assembled
  - Check all bolts and ensure that they are tight
  - Check all cotter pins and linkage pins and ensure they are properly installed and can be secured
  - Check that any “wear points” (i.e. Points, blades, edges, tines) have been properly installed.

- Check PTO series is correct and that the PTO is the correct length
- All lubrication is completed.
  - Refer to lubrication instructions and lubricate implement
  - Ensure that gearbox has correct oil and volume.
- All hydraulic fittings and hoses have been correctly installed
- Ensure the stability of the tractor has not been compromised.
- All guards, safety features and decals are in place and secure.
- The product number and serial number are recorded      FQ\_\_\_\_ - \_\_\_\_\_

### PRODUCT CHECKLIST – Delivery

- The customer has been given the Operator’s Manual, Task Hazard Analysis and Farm Machinery Safe Work Practices
  - Has recommended to the customer to become familiar with all sections of manuals, especially safety and operation procedures.
- The customer undertakes to read the complete operator’s manual and understands its contents, prior to operation of the machine
- All safety information has been explained, and decals, guards and serial number identified
  - Explain to the customer about transporting the implement on roads or highways.
- The maintenance of the implement has been explained
- The starting and operating procedures have been explained

**I acknowledge that all of the delivery items listed above were reviewed with me at delivery.**

**Dealers Name:** \_\_\_\_\_

**DealersAddress:** \_\_\_\_\_

**Customers Name:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Customer’s Signature:** \_\_\_\_\_ **Date:** \_\_\_\_\_

**Dealer’s Signature:** \_\_\_\_\_ **Date:** \_\_\_\_\_

**Please Note:** A signed complete copy of this form must be returned to us, with the “Warranty Registration & Installation Form” for legal & warranty purposes.

**Ensure the customer has signed the WARRANTY REGISTRATION & INSTALLATION FORM and a copy has been returned to Fieldquip Australia Pty Ltd, PO Box 333 Oakey, Queensland 4401**

## WARRANTY

All Fieldquip machinery is covered by a comprehensive warranty against faulty materials and workmanship provided that (i) The machine is operated in normal use, (ii) The machine is correctly serviced and maintained, (iii)The machine is worked within its stated capacity (ie. Horsepower limit and PTO Speed), (iv) The machine is not subjected to any modifications or damage from improper use, (v) Fieldquip is in receipt of duly signed pre-delivery and installation certificate and warranty documentation.

The term of warranty shall be 12 months from date of installation except machines sold into the Hire Industry; these shall be void of warranty.

The following items are not covered by Fieldquip warranty; (i) Power Take-off shafts and clutches, (ii) Blades, tynes, knives, tyres, belts etc. (iii) Freight costs, (iv) Loss of income from the machine due to a warranty fault, (v) Use of non genuine parts.

The manufacturer's obligation under this warranty is limited to correcting without charge at its factory or by one of its authorised Dealers, with the manufacturer's approval, any parts thereof, within 12 months from date of purchase by the original user, and which upon examination shall disclose to the manufacturer's satisfaction to have been originally defective.

Correction of such defects by repair to, or supplying of replacements of defective parts, shall constitute fulfilment of all obligations to the original user: Manufacturer shall not be liable for loss, damage, or expense directly or indirectly from the use of its product or from any other cause. Defective parts must be returned freight paid each way by the purchaser to the manufacturer.

This warranty shall apply to any parts which must be replaced because of normal wear, or which have not been repaired or altered outside of the manufacturer's factory unless authorised by the manufacture. This warranty should not be construed as a free service period during the warranty period.

No person, agent or dealer is authorised to give any warranties on behalf of the manufacturer or to assume for the manufacturer any other liability in connection with any of its product unless made in writing from the manufacturer.

All claims will be nul and void if any warranty work is commenced without prior approval from Fieldquip.

## WARRANTY PROCEDURE

- Contact Dealer who will contact Fieldquip
- Photos of repair required emailed to **warranty@fieldquip.com** with description of problem
- Claim will be assessed by warranty department and if repair is approved a warranty claim number and form will be issued.
- This process is designed to take no longer than 24hrs from receiving email requesting warranty.
- Warranty claim form to be returned to Fieldquip prior to reimbursement.

- Under no circumstances will travel, freight charges be recognised under warranty this is the responsibility of the owner.
- Please note that not all items are covered under warranty, refer to warranty card. If unsure please contact warranty claim department on 07) 4691 1500.
- **Under no circumstance should work be commenced without a warranty claim form number and approval.**
- Fieldquip will not recognise any work carried out without a warranty claim number.

## DELIVERY, WARRANTY AND SAFETY ACKNOWLEDGEMENT

To be completed by the dealer and purchaser at the time of delivery and returned to Fieldquip

**Dealer Name and Address:**

.....  
 .....

On behalf of the above dealership I hereby state:

1. This is a new machine and has been thoroughly checked by our personnel prior to delivery and is in safe working condition.
2. I have fully explained the warranty including the owner's responsibility to pay for travelling costs and expendable items.
3. I have supplied the owner with an operator's manual and explained the service and safety aspects of the machines operation and the existence of the relevant safety standards.
4. I have shown the owner the service point of the machine and explained the importance of regular service.
5. I have delivered the operators manual and warranty card.
6. I have reviewed the contents of these books including the relevant sections on safety with the new owner.
7. I have demonstrated the machines safety features and explained the approved work practices.
8. I have discussed the approved codes of practice which apply to this type of machine.
9. I will arrange to return this form to Fieldquip for registration within 14 days of sale along with the warranty card.

Name: ..... (Block Letters) Position Title: .....  
 Signature: ..... Date: .....

**Owners Name and Address:** .....  
 .....  
 .....

I hereby acknowledge:

1. I have received and accepted delivery of the machine listed above.
2. The machine has been delivered to me with all systems functioning and running to my satisfaction.
3. I have been instructed and understand the application, limitations and capabilities that the machine has been designed for.
4. I understand and accept the Fieldquip warranty and understand I am responsible to pay for travelling costs and expendable items.
5. I have received an operator manual and warranty card and have reviewed their content regarding the correct operation of the machine.
6. I will be expecting confirmation of this warranty registration from Fieldquip.
7. The dealer has supplied an owner's manual with the machine and reviewed the sections on safety with me making any explanations that may be required.
8. I am particularly aware of the importance of not operating the machine outside the safety guidelines.
9. I understand the principles of safe operation of this machine and accept responsibility to ensure that any persons who operate this machine are properly instructed in these matters.
10. In the event that the regulatory authorities or Fieldquip should require modifications or new service procedures to be made or adopted we indemnify Fieldquip and the dealer from any liability or cost which may be involved.
11. In the event that ownership of this machine should pass from me, I undertake to pass responsibility for the above matters on to the new owner and I will advise Fieldquip of the change of ownership.

Name: ..... (Block Letters) Title: .....  
 Signature: ..... Date: .....